

ATEX Pneumatic Totalizing Counters

Type 495



- Versions for flush and surface mounting
- Manual/pneumatic reset or without reset
- 6 or 8-digit display
- Adding up counting
- Simple installation
- Maintenance-free operation









ouridoo modiit voroioi

TECHNICAL DATA

EX-CLASSIFICATION

Gas: Ex II 2G Ex h IIB T4 Gb (0°C \leq Ta \leq 60°C) Dust: Ex II 2D Ex h IIIB T120°C Db (0°C \leq Ta \leq 60°C)

Mining: Ex I M2 Ex h I Mb (0° C \leq Ta \leq 60°C)

Display	6-digit, 2 x 4 mm numerals, white/black (with reset) 8-digit, 2 x 4 mm numerals, white/black (without reset)
Digit height	4 mm
Counting range	1 to 99 999 999 or 1 to 999 999
Operating pressure	2 6 bar
Air quality	Filtered, dried and unlubricated air according to ISO 8573 -1: 2010 [7:4:4]; designed for use with compressed air. Operates with other media/pure gases upon request
Filter pore size	< 40 microns; use suitable filters when necessary
Ambient temperature	0+60°C
Maximum medium temperature	30°C (maximum compressed air temperature)
Connnection	M5 hose screw connection
Fastening	Flush mount version: Suitable for fastening to a front panel. Two M4 clearance holes Surface mount version: Three M3 clearance holes
Protection (IEC 144)	IP40 with connected hoses. IP55 when using a transparent hinged cover (see Accessories)
Weight	Approx. 70g

Data sheet	© Hengstler GmbH Uhlandstr. 49 D-78554 Aldingen/ Germany ☎+49 74 24 -89 0 Fax +49 74 24 - 89 500	Page	
Version 1 180820en	E-mail: info@hengstler.com Internet: www.hengstler.com	1/4	




ATEX Pneumatic Totalizing Counters

Type 495

TECHNICAL DATA

Counting	Adding up
Pneumatic signaling at Port "X"/"Y"	Square-wave signal (almost, no "slow" pressure rise/drop)
Maximum counting frequency	5 Hz (count input "X")
Minimum counting pulse duration	8 ms (count input "X")
Reset	Manual with a button (optional)By external pneumatic signal at input "Y"
Maximum reset frequency	4 Hz (reset input "Y")
Minimum reset pulse duration at inlet "Y"	180ms
Air delay time until counting restart	Minimum 50 ms (after pulse end of the reset signal at input "Y" and the restart of counting at input "X")
Mounting position	Any


CONNECTION DIAGRAM

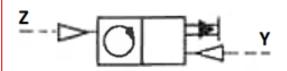

Z = Counting input

Y = Reset input

DIMENSIONAL DRAWINGS

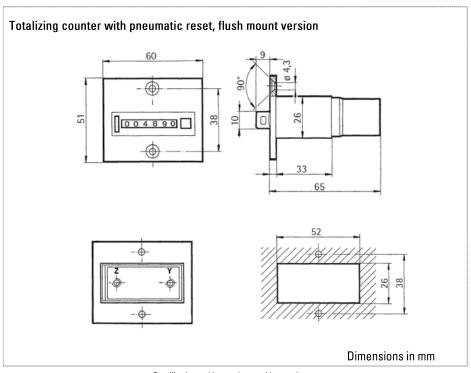


L	Data sheet	© Hengstler GmbH Uhlandstr. 49 D-78554 Aldingen/ Germany \$\frac{1}{24} + 39 0 Fax +49 74 24 - 89 500		
	Version 1 180820en	E-mail: info@hengstler.com Internet: www.hengstler.com	2/4	



ATEX Pneumatic Totalizing Counters


Type 495

DIMENSIONAL DRAWINGS

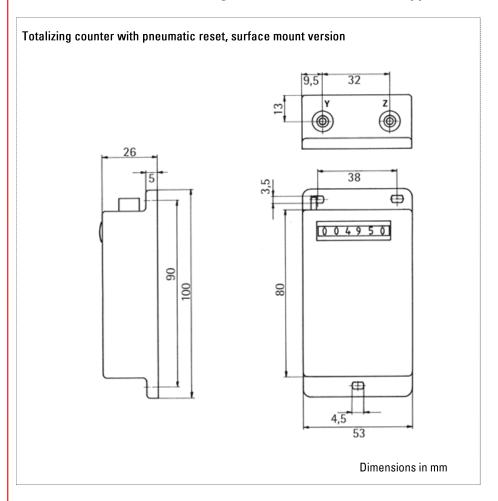

ACCESSORIES

Optional use of a protection transparent cover

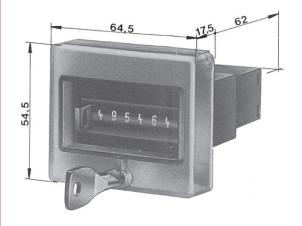

Data sheet	© Hengstler GmbH Uhlandstr. 49 D-78554 Aldingen/ Germany \$\frac{1}{24} + 89 0 Fax + 49 74 24 - 89 500	Page	
Version 1 180820en	E-mail: info@hengstler.com Internet: www.hengstler.com	3/4	



ATEX Pneumatic Totalizing Counters

Type 495

ORDERING INFORMATION Counters

Accessories

Version		Ordering code
Flush mount	6-digit with manual and pneumatic reset	0 495 764
	8-digit (without reset)	0 495 720
Surface mount	6-digit with manual and pneumatic reset	0 495 762
Protection cover (for flush mount version)	With knob	1 405 613
	With key	1 405 614

Data sheet	© Hengstler GmbH Uhlandstr. 49 D-78554 Aldingen/ Germany ☎+49 74 24 -89 0 Fax +49 74 24 - 89 500	Page
Version 1 180820en	E-mail: info@hengstler.com Internet: www.hengstler.com	4/4